

6175782

1/15

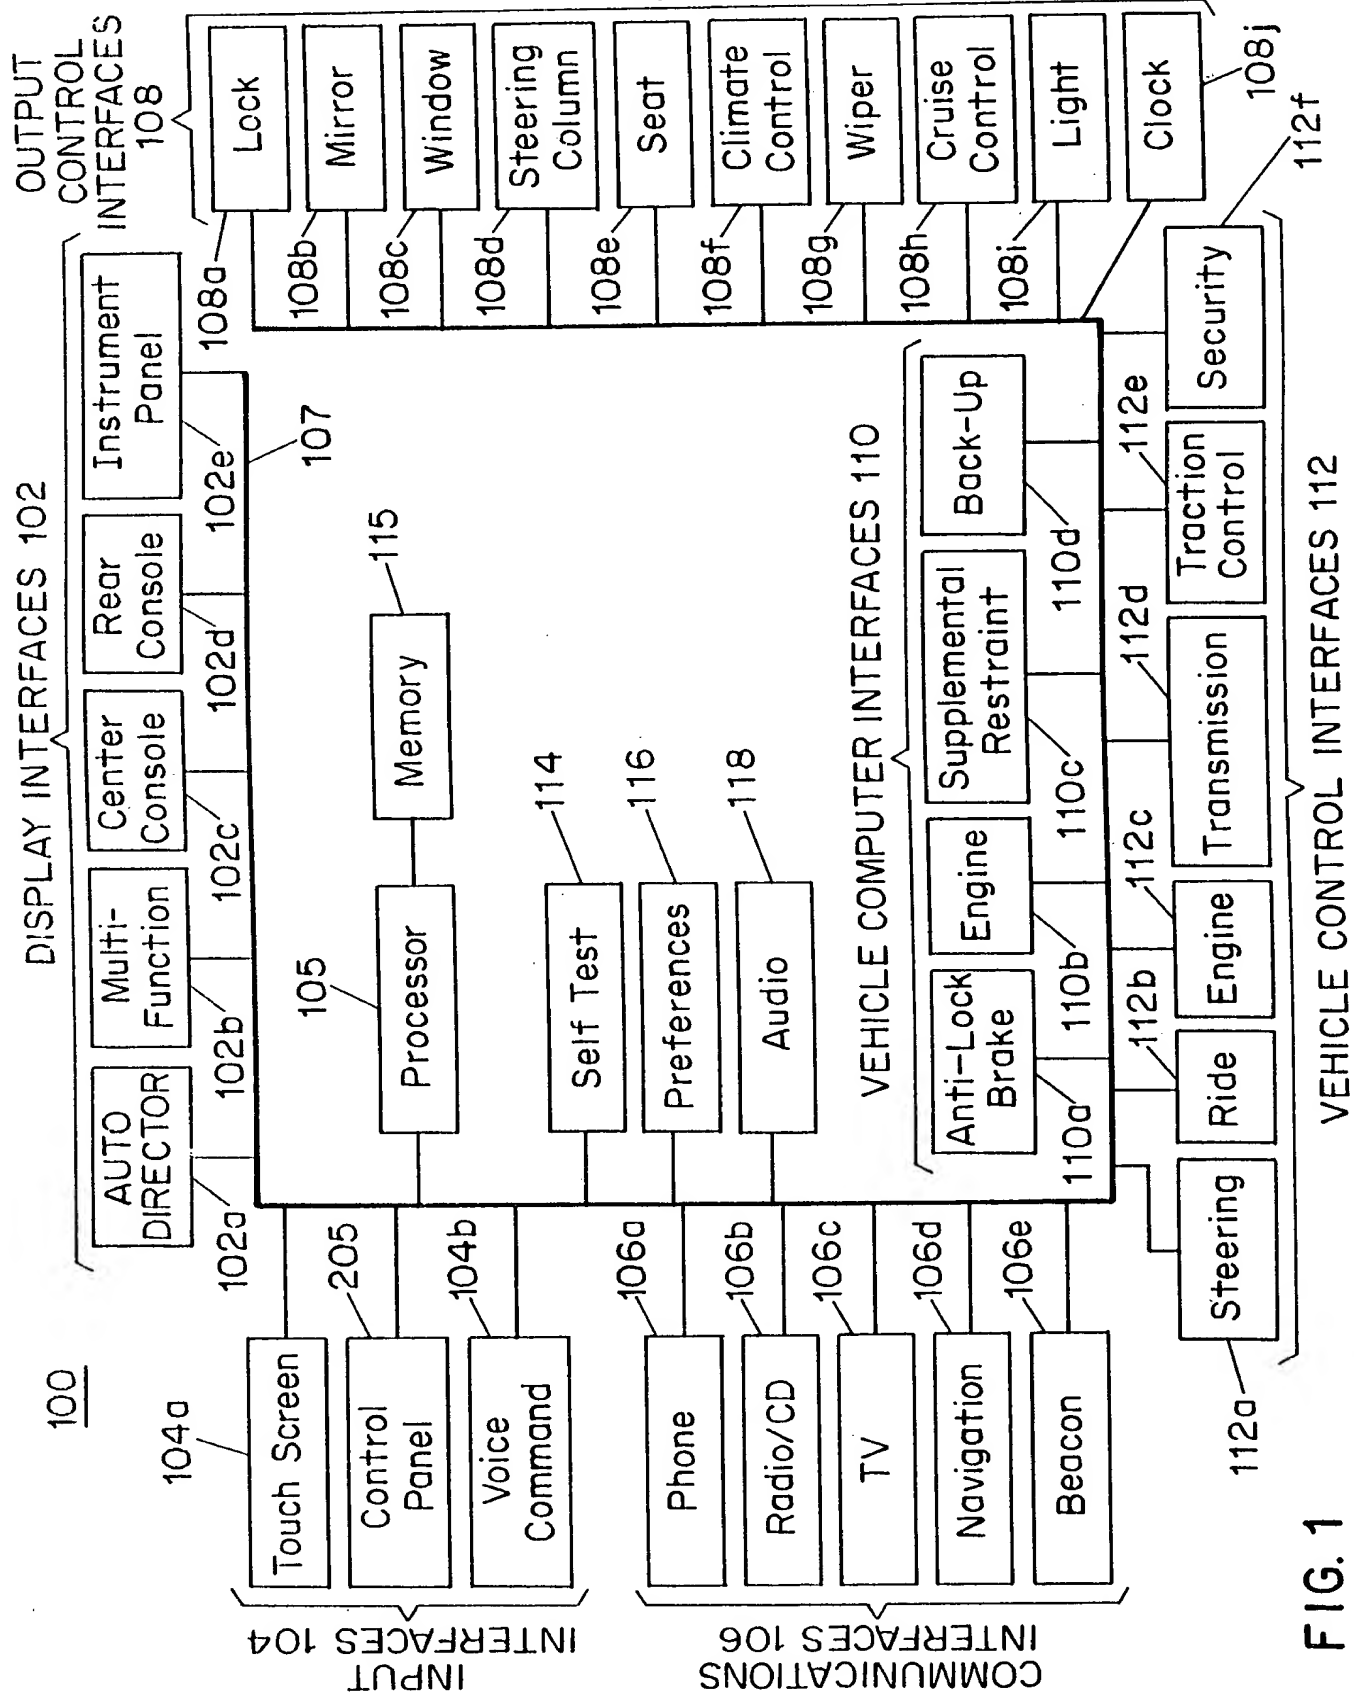


FIG. 1

*fig 15*

657250" 6E070460

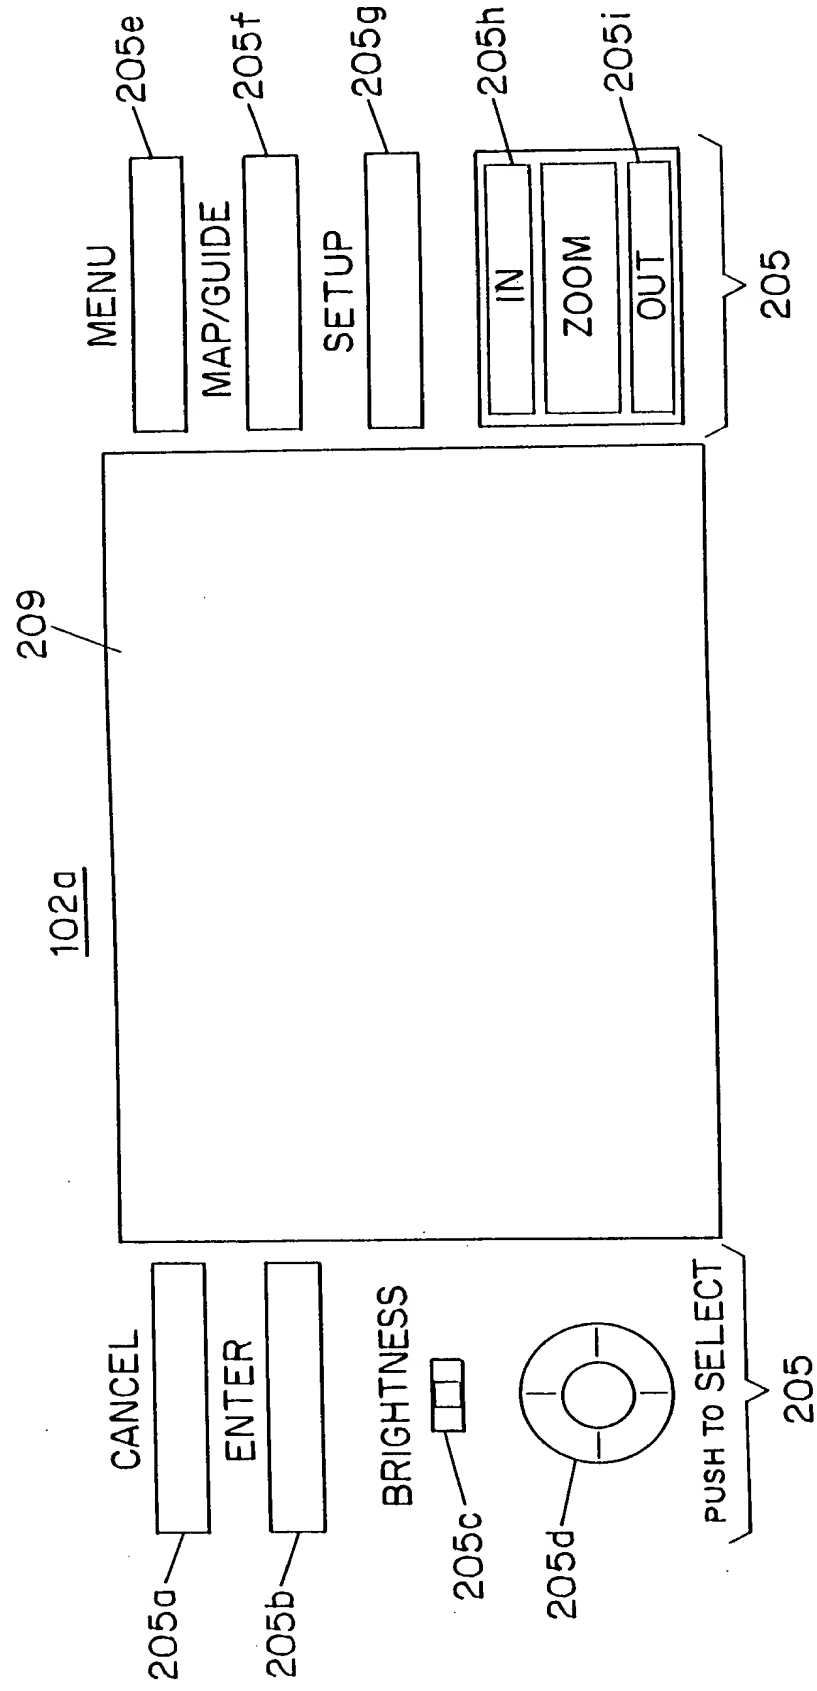


FIG. 2

3/15

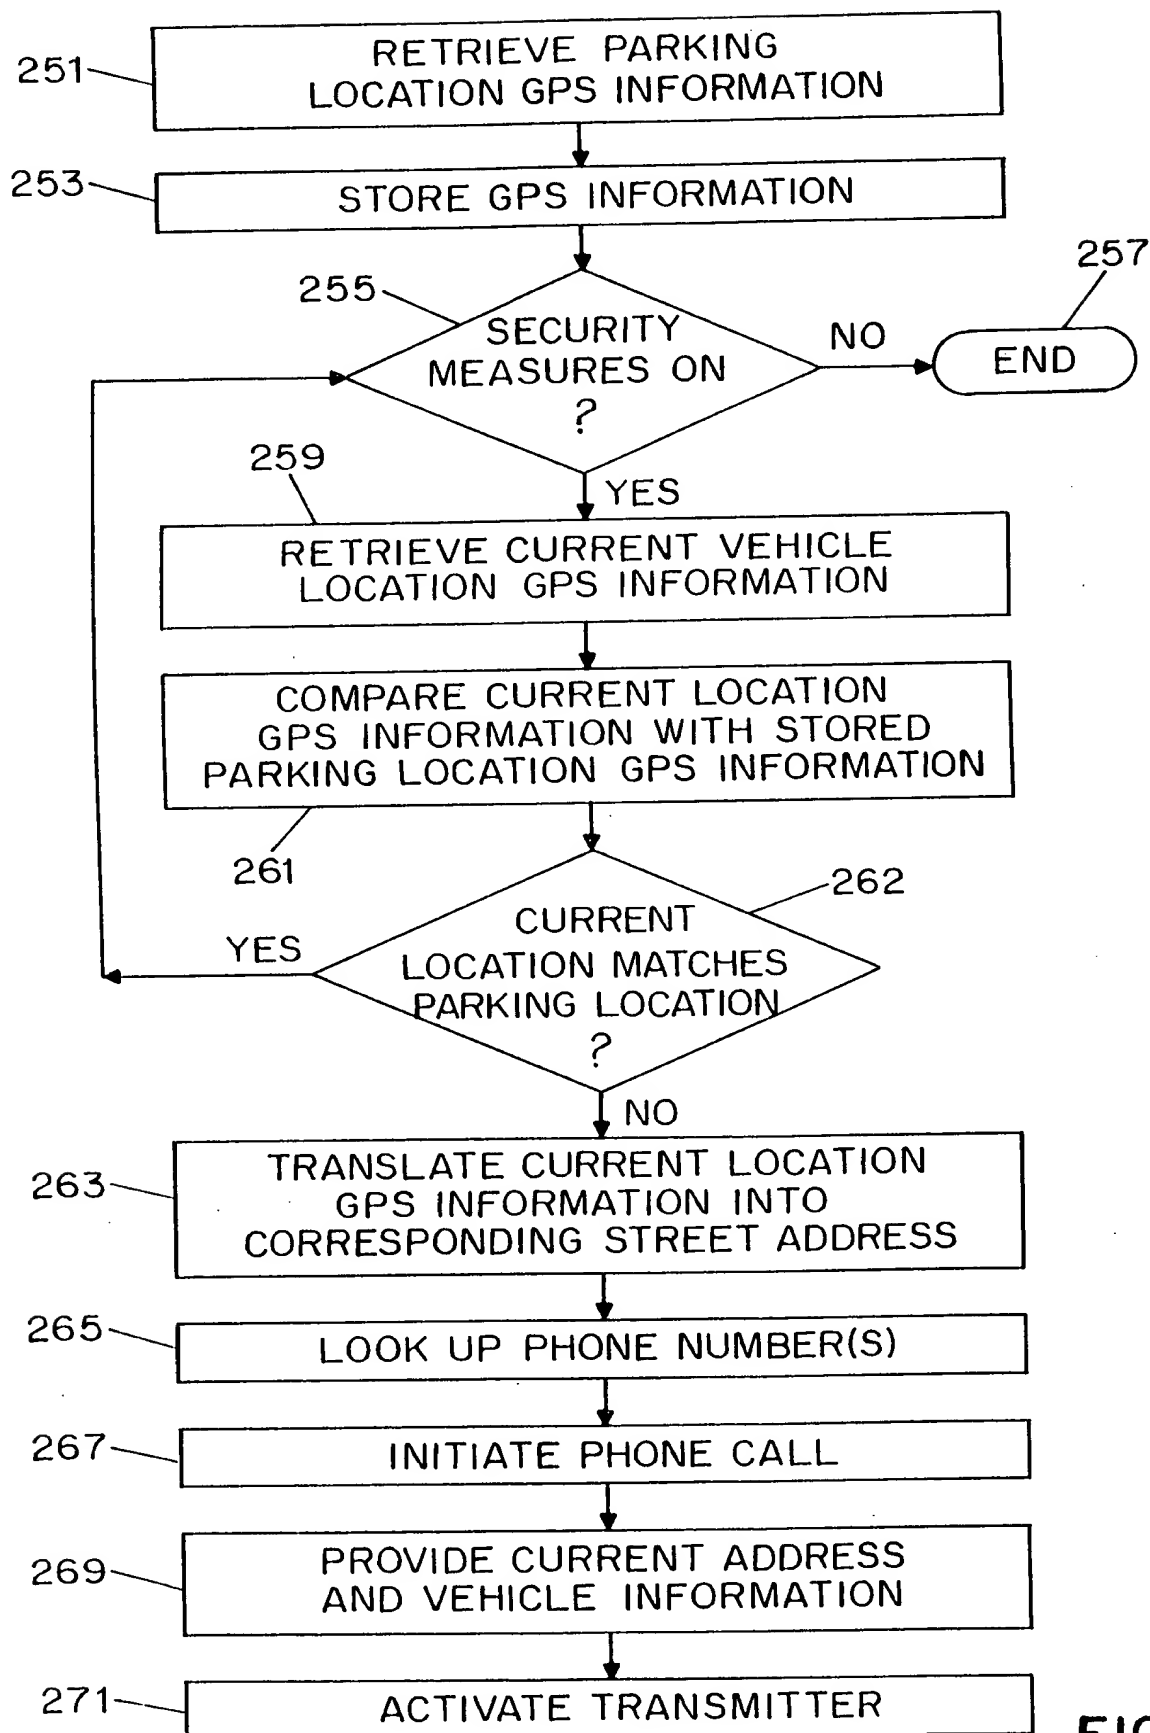


FIG. 3A

09401039.02469

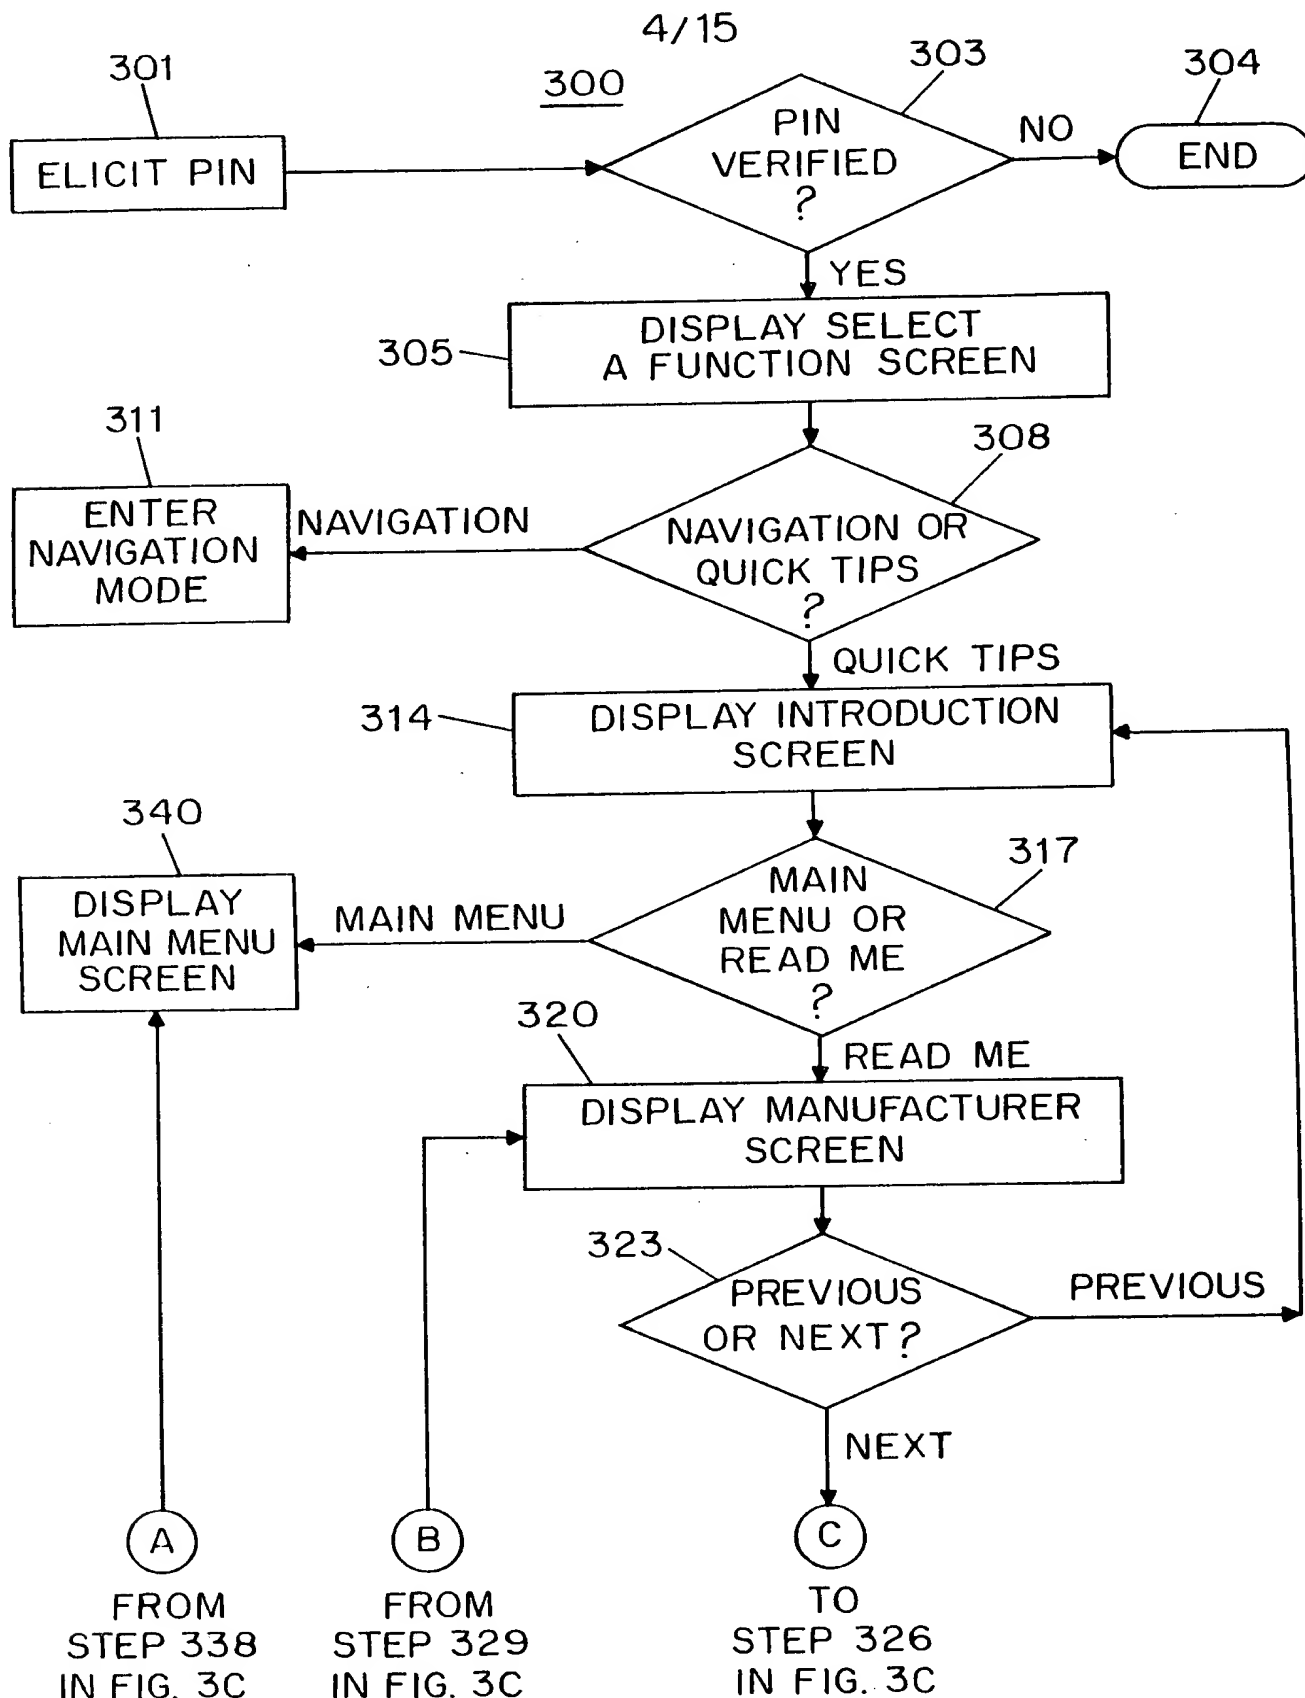


FIG. 3B

5/15

TO  
STEP 340  
IN FIG. 3B

(A)

TO  
STEP 320  
IN FIG. 3B

(B)

FROM  
STEP 323  
IN FIG. 3B

(C)

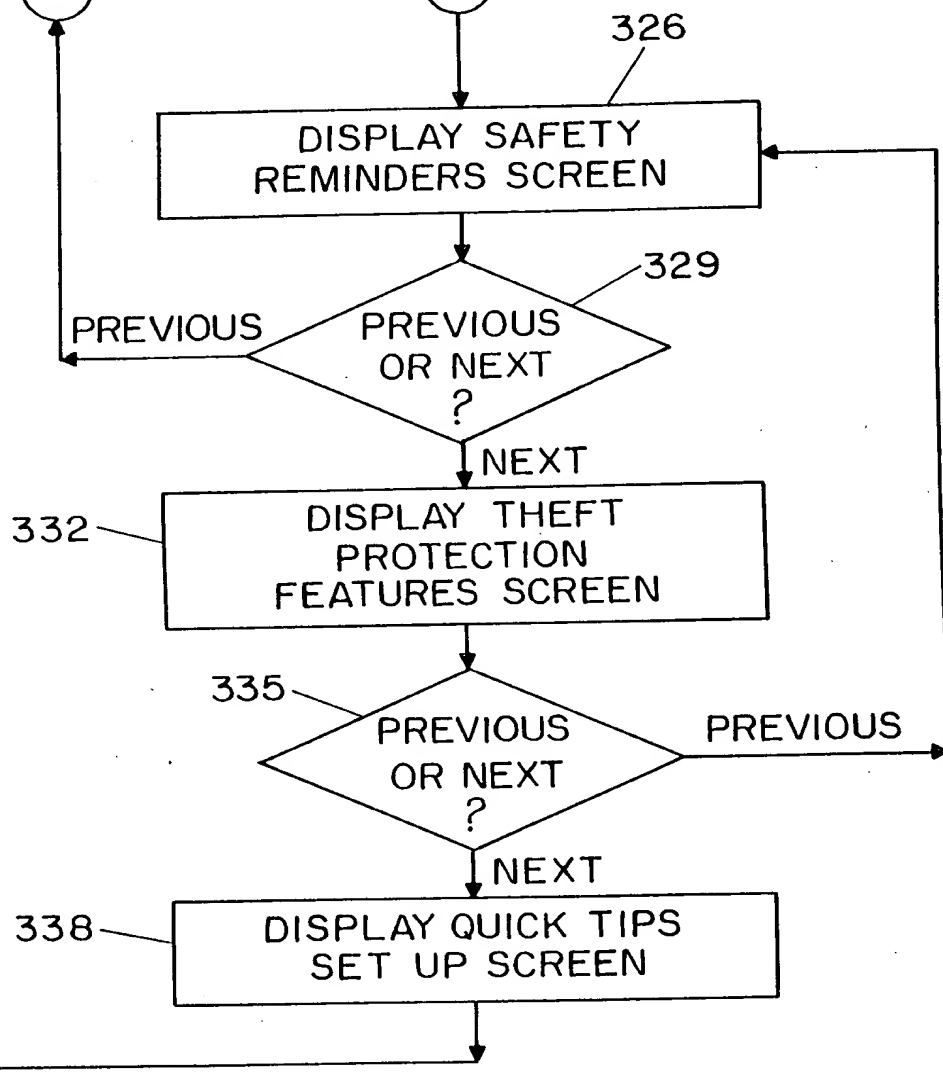


FIG. 3C

09401039-09460

6/15

209

ENTER PIN, FOLLOWED BY "#"

1	2	3
4	5	6
7	8	9
*	0	#

FIG. 4A

209

SELECT A FUNCTION

401	NAVIGATION	QUICK TIPS	403
-----	------------	------------	-----

FIG. 4B

667260-6E070460

7/15

209

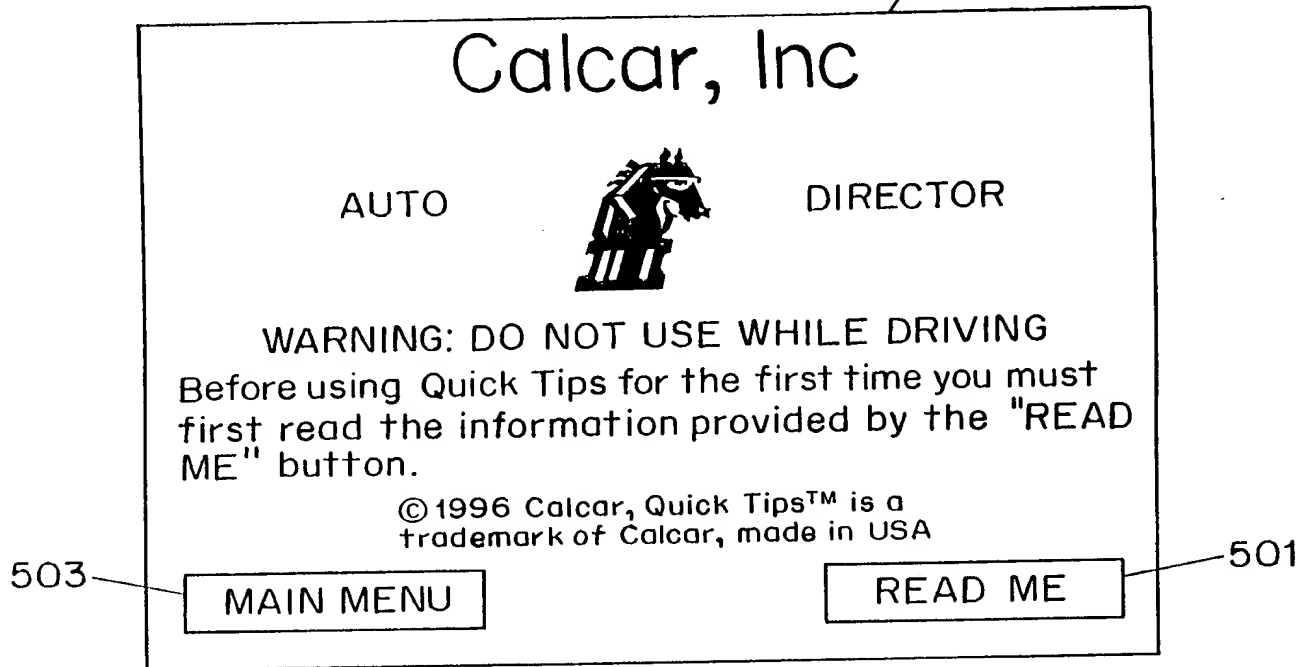


FIG. 5

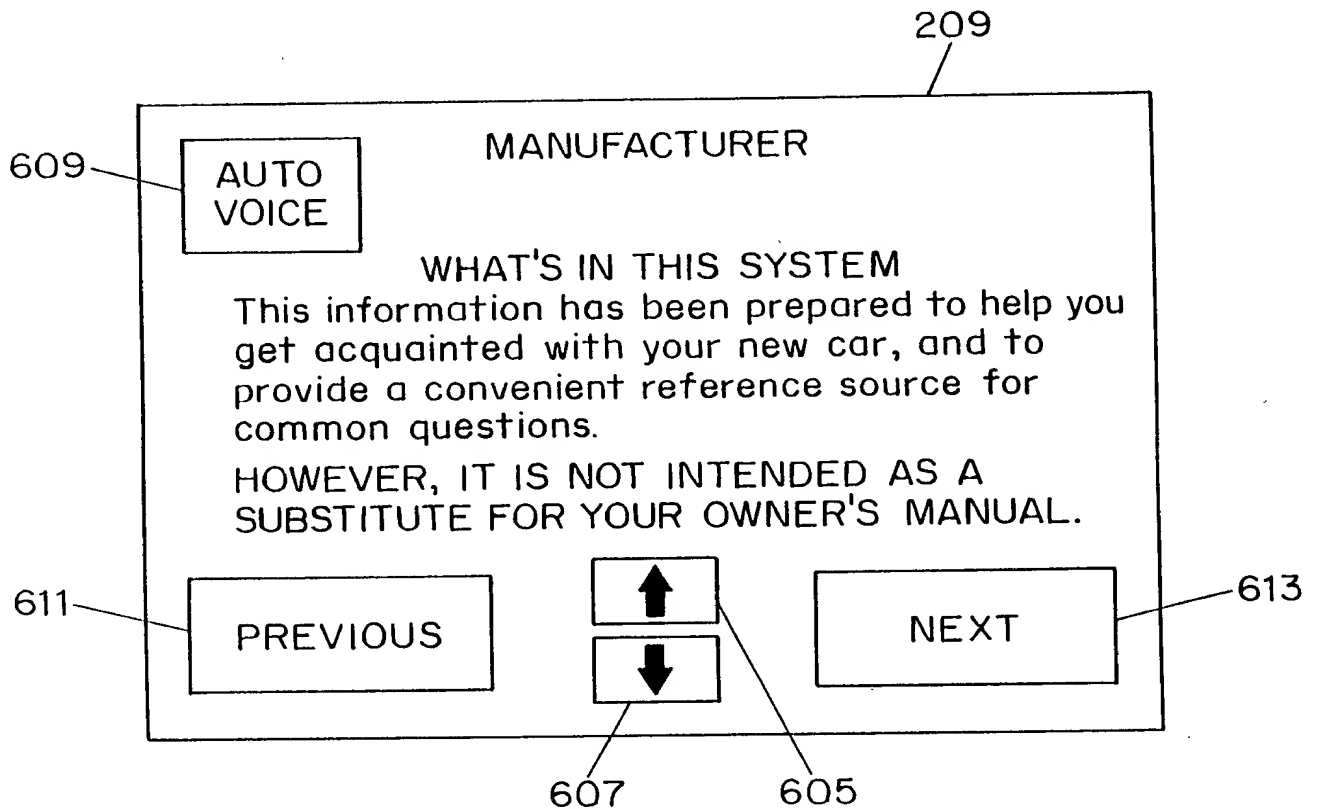


FIG. 6

09401099-094159

8/15

209

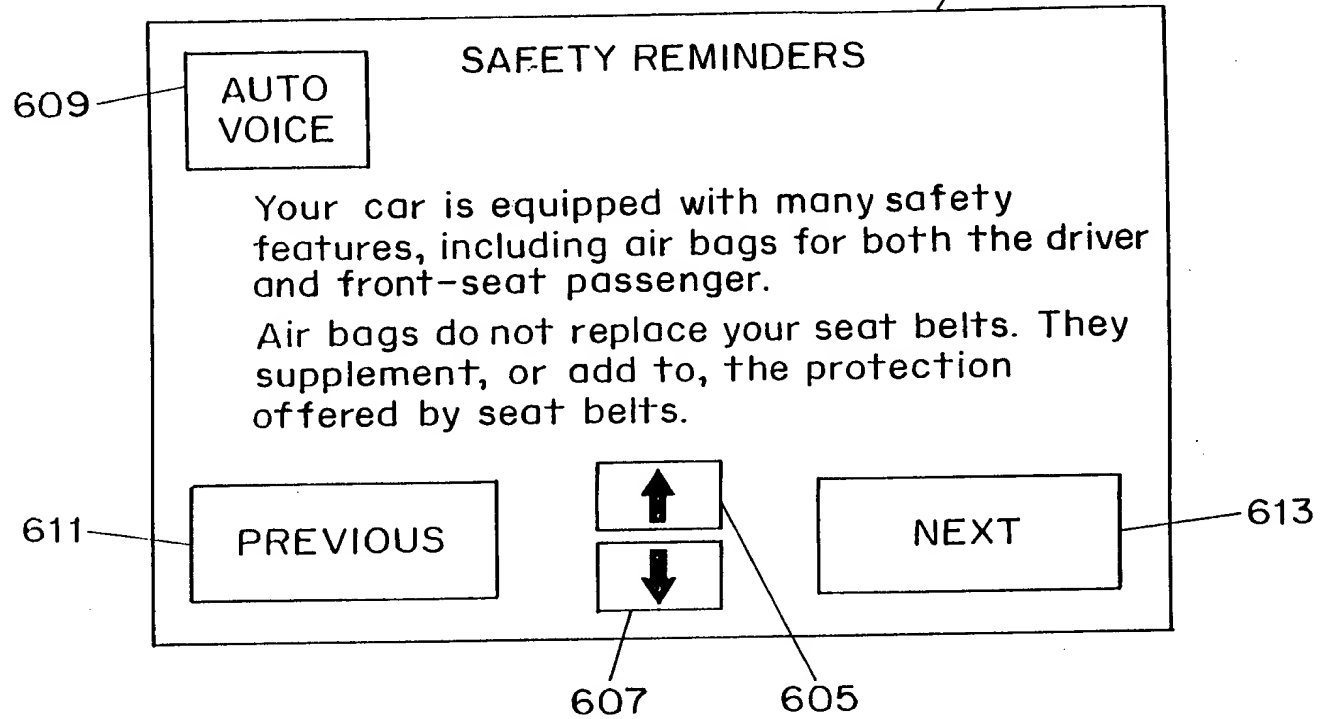


FIG. 7

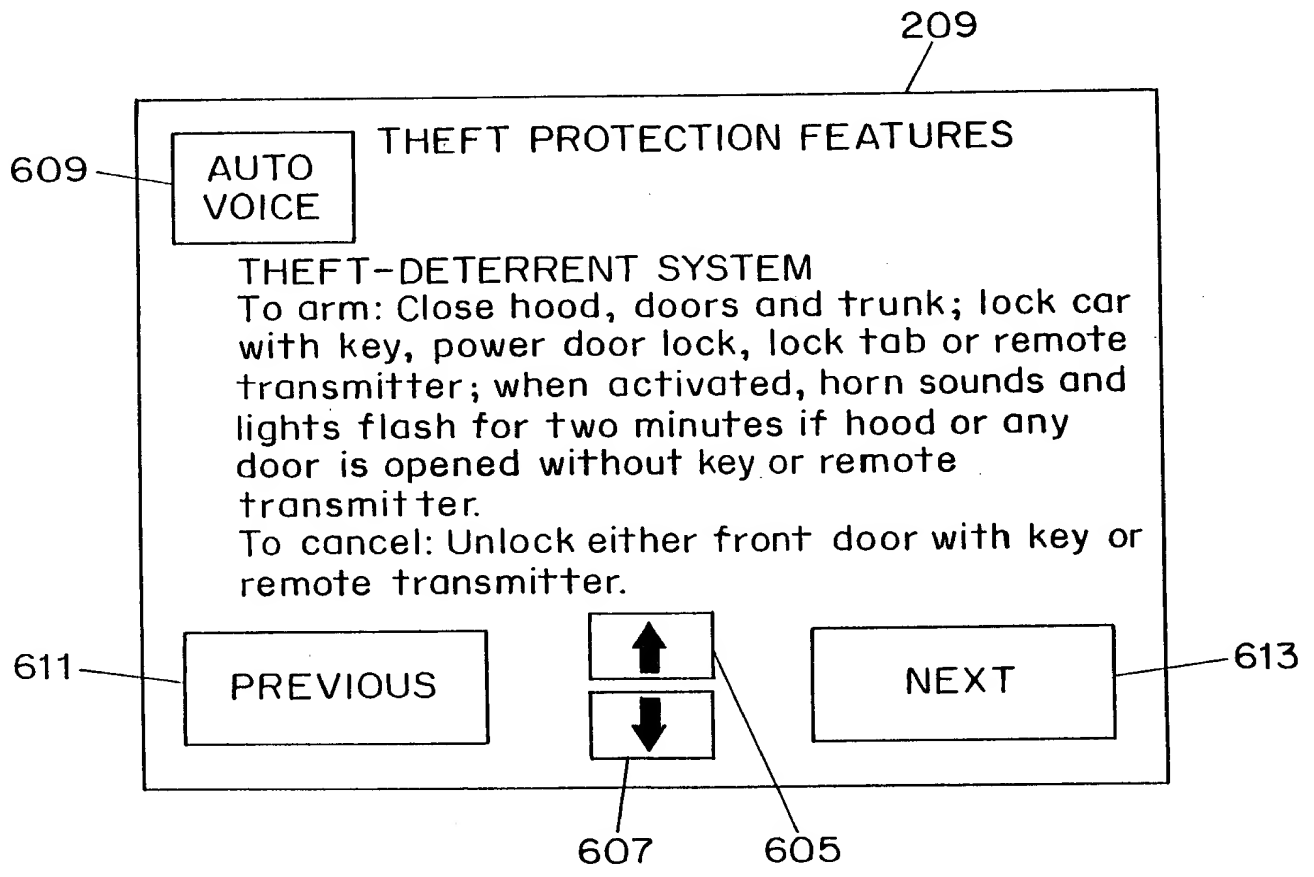


FIG. 8

09401039-02499



9/15

209

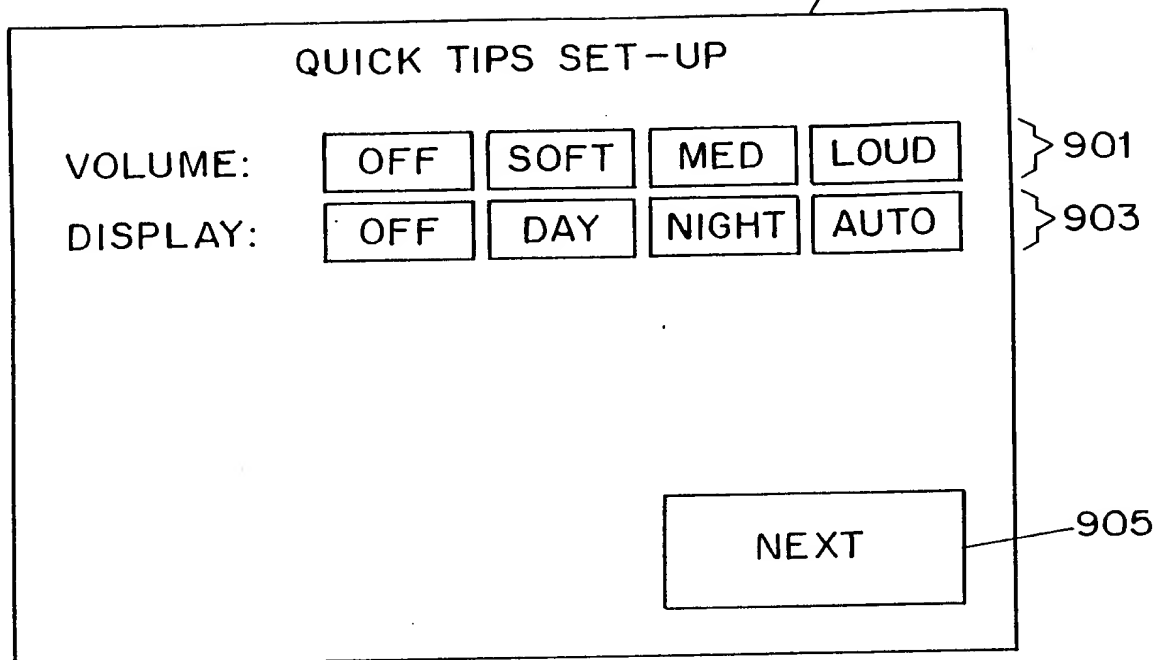


FIG. 9

209

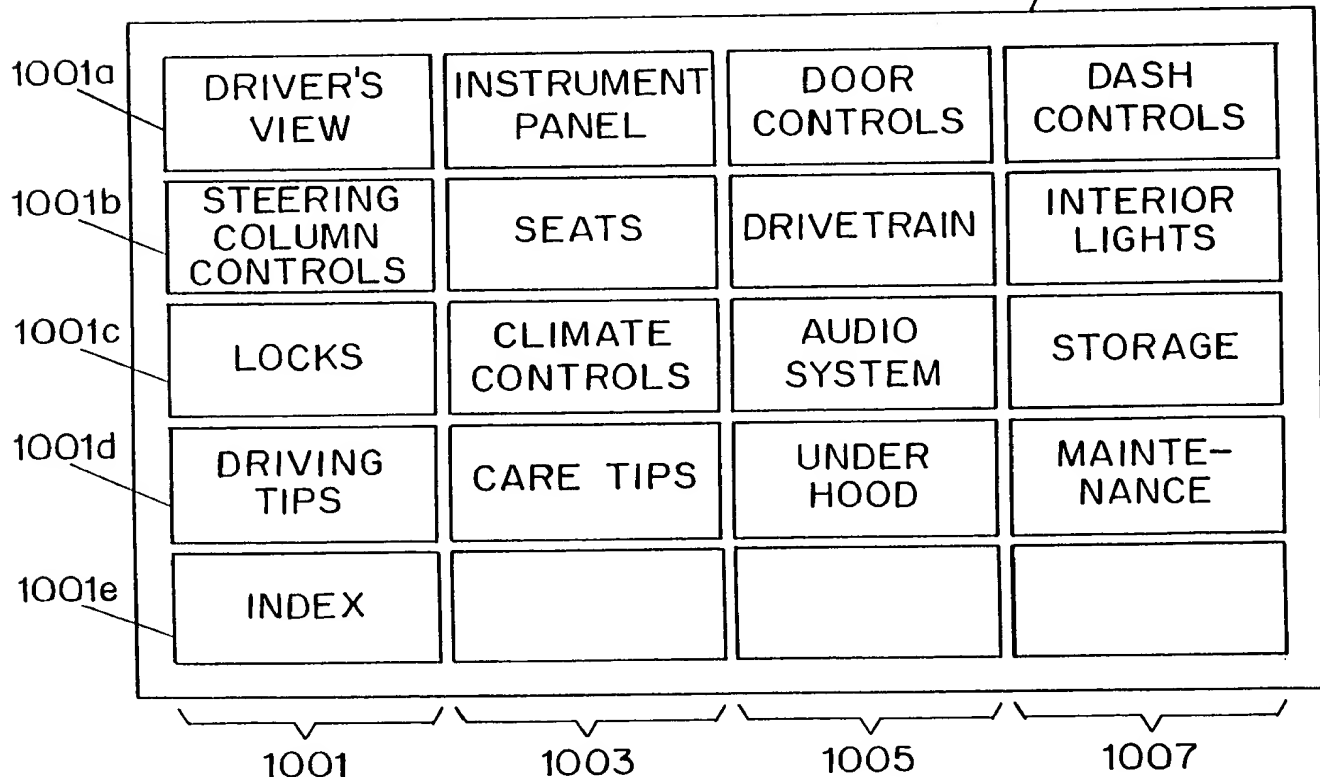


FIG. 10

55 FEB 01 5:00 PM '95

10/15

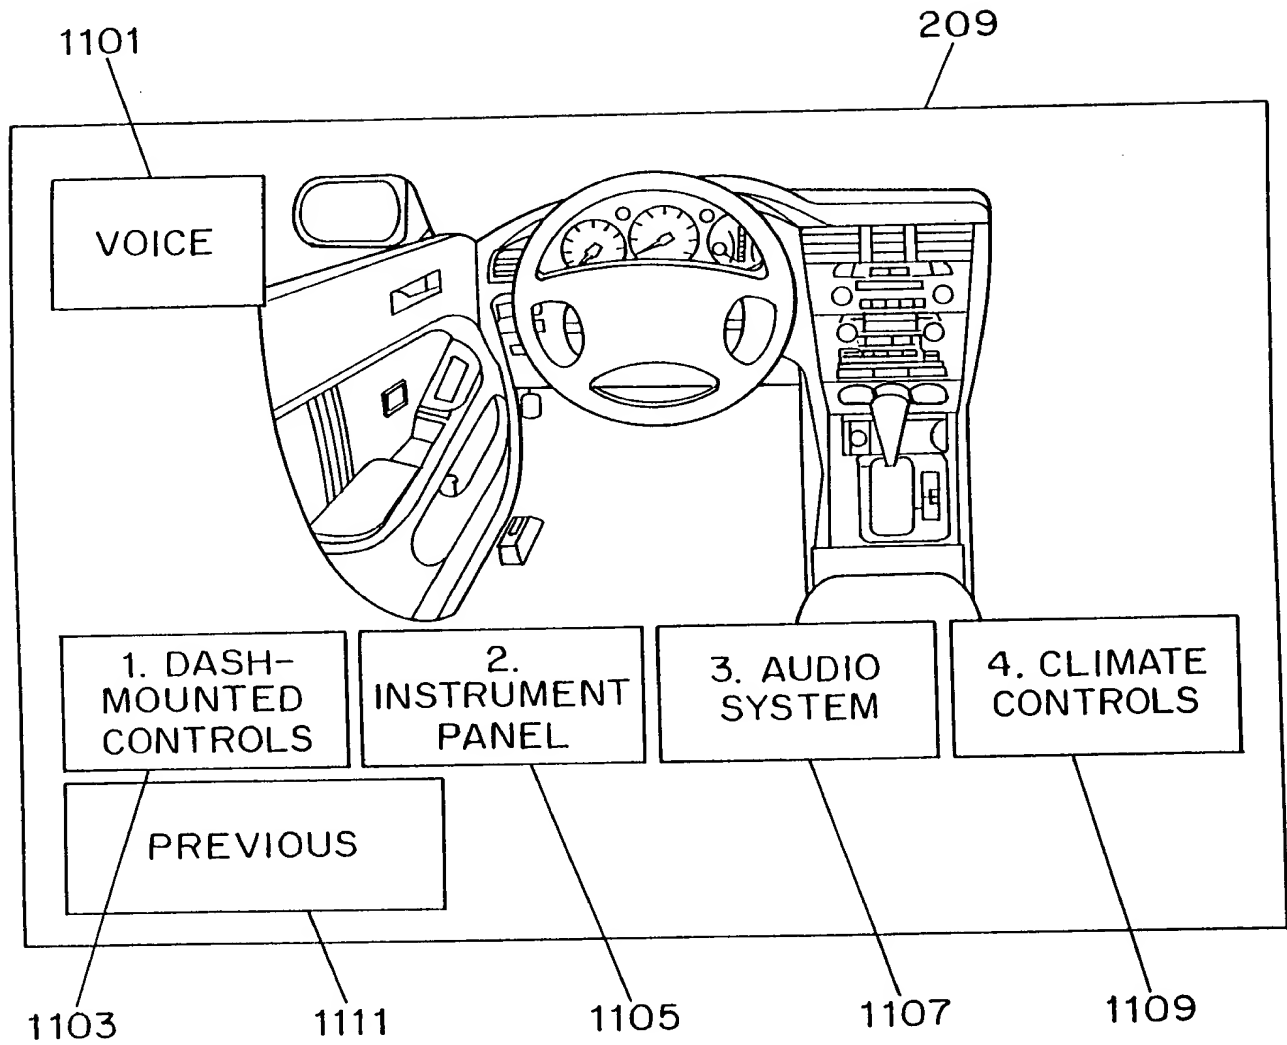


FIG. 11

11/15

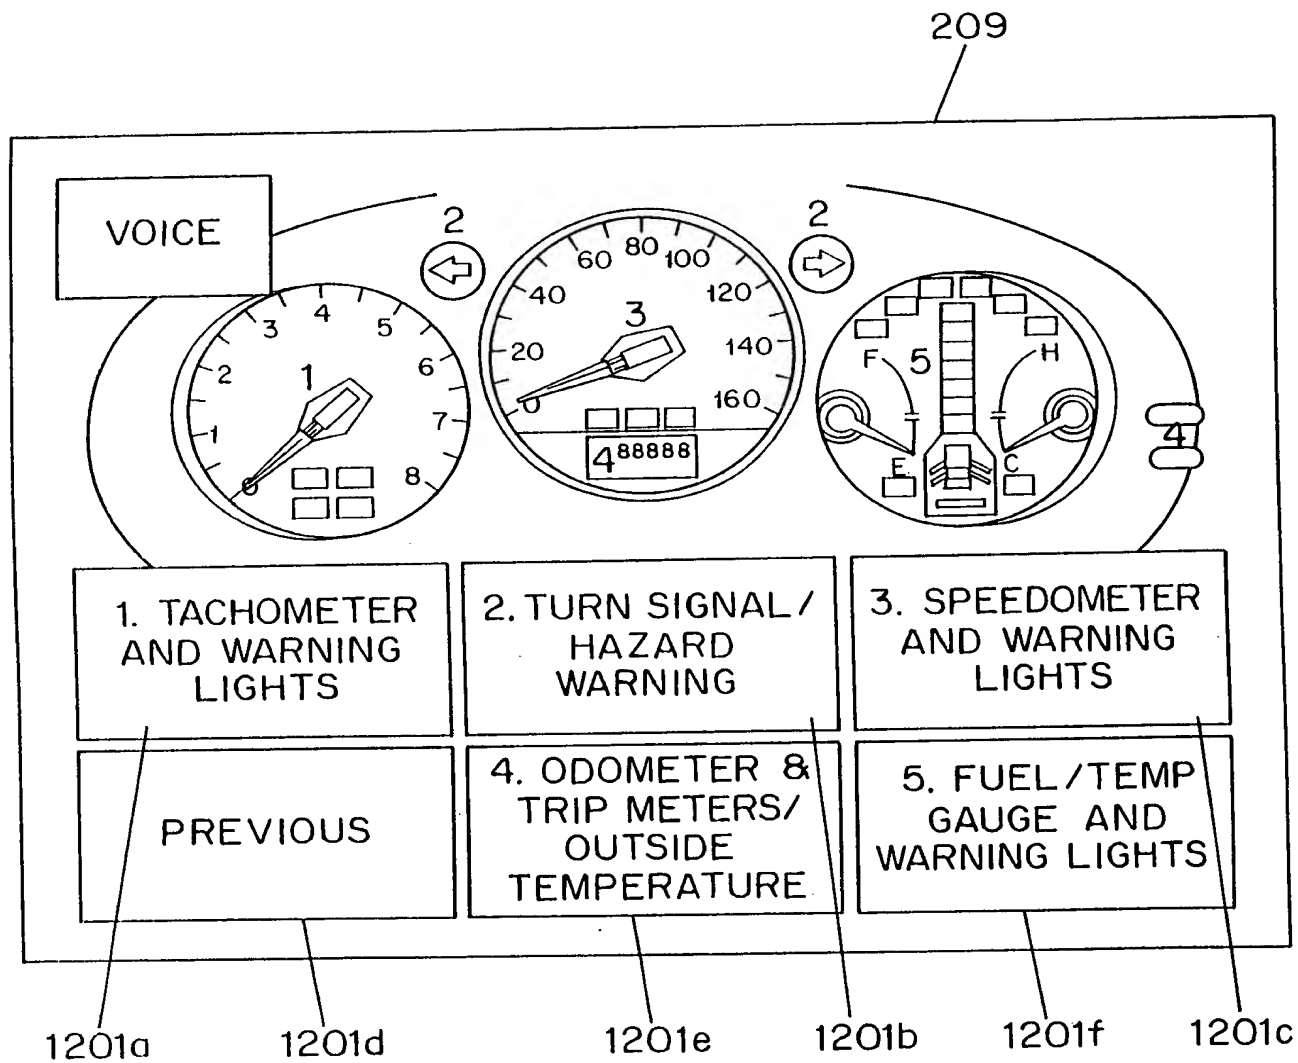


FIG. 12

66T260" 6E0F0460

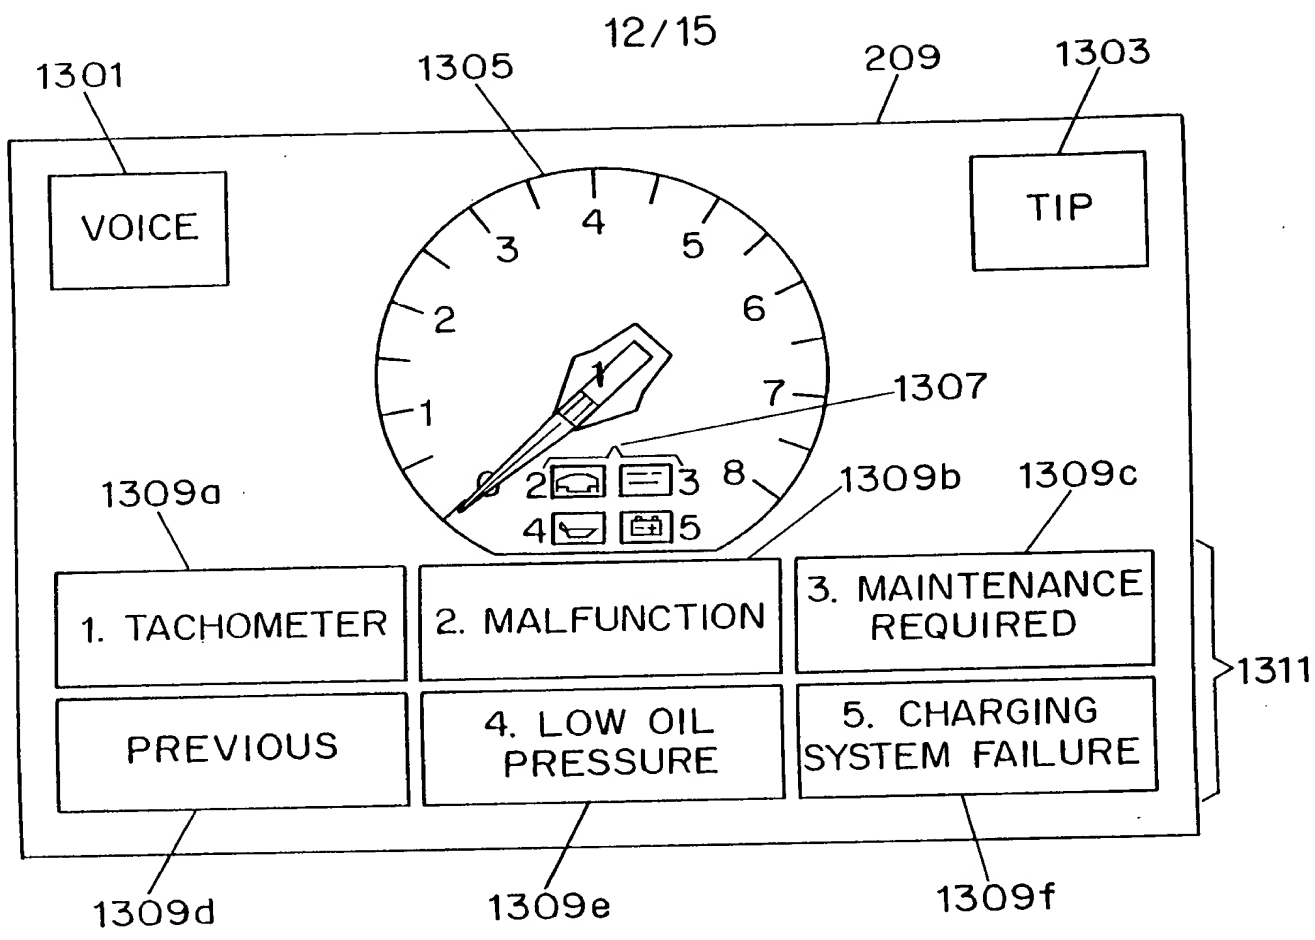


FIG. 13

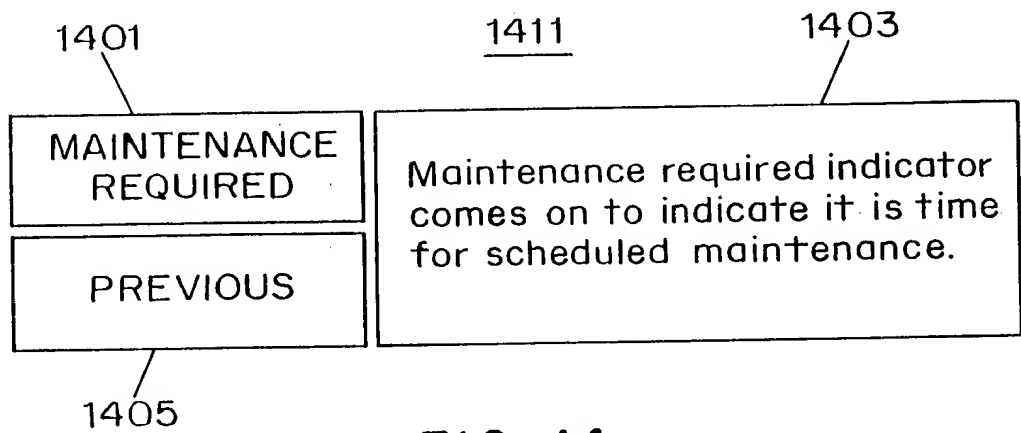


FIG. 14

66 FEB 60 " 5 ECT 0460

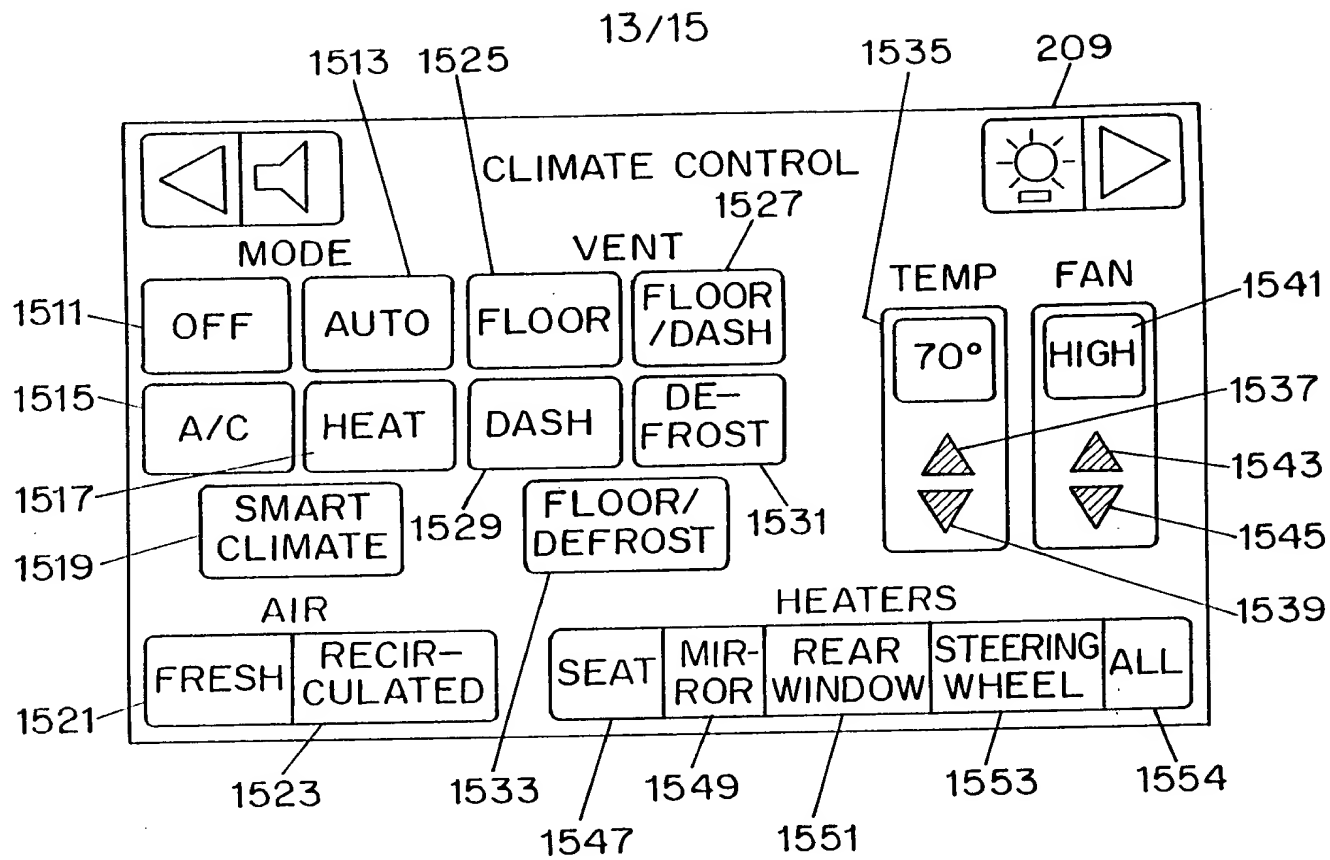


FIG. 15

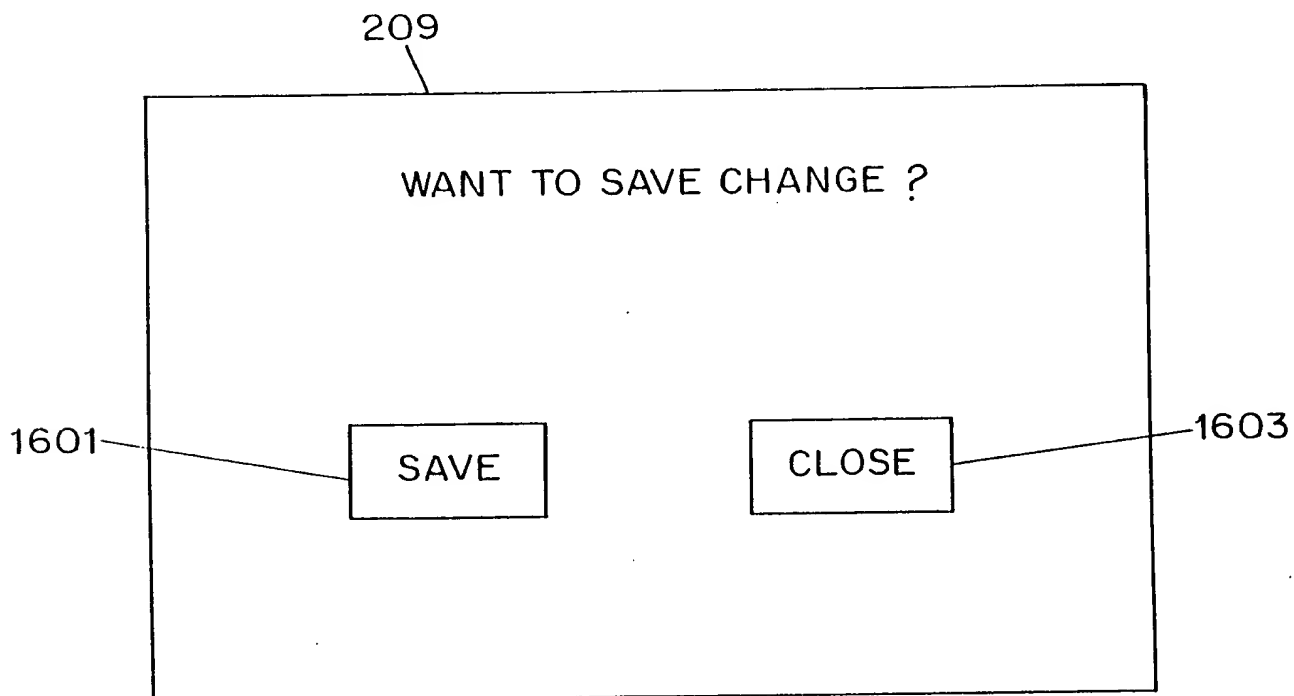


FIG. 16

667260-6E070460

209

ENTER LETTER OR ITEM NAME:

AIR CONDITIONING

A	B	C	D	E	F	G	H
I	J	K	L	M	N	O	P
Q	R	S	T	U	V	W	X
Y	Z						

DONE

1705

1701

1703

FIG. 17

209

INDEX

AIR CONDITIONING

ANTI-LOCK BRAKE SYSTEM INDICATOR

AUTOMATIC CLIMATE CONTROL

AUTOMATIC TRANSMISSION

SHIFT LEVER POSITION INDICATOR

PREVIOUS

↑

↓

1805

1801

1803

FIG. 18

05401039-093199

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

651260 SEOT0460

1901		1903	
1905	AIR CONDITIONING	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	
	ANTI-LOCK BRAKE SYSTEM INDICATOR	LINK TO WARNING LIGHT OPTION #4 ON FUEL/TEMP SCREEN (NOT SHOWN)	
	AUTOMATIC CLIMATE CONTROL	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	
	CHARGING SYSTEM FAILURE INDICATOR	LINK TO CHARGING SYSTEM FAILURE OPTION 1309f (FIG. 13)	
	CLIMATE CONTROL SYSTEM	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	
	COOLING	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	
	CRUISE CONTROL INDICATOR	LINK TO WARNING LIGHT OPTION #2 ON SPEEDOMETER SCREEN (NOT SHOWN)	
	DEFOG/DEFROST	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	
	DOOR AJAR INDICATOR	LINK TO WARNING LIGHT OPTION #7 ON FUEL/TEMP SCREEN (NOT SHOWN)	
	DIRECTIONAL SIGNALS INDICATOR	LINK TO TURN SIGNAL/HAZARD WARNING OPTION 1201b (FIG. 12)	

FIG. 19